

General Menu

Main Menu

Three Phase Energies List

Main Page

Partial Σ L1 Σ L2 Σ L3 Σ IMP T1

793200.156 kWh

Active Imported Energy tariff T1 with partial register

Partial Σ EXP T1

647.6 kWh

Active Exported Energy tariff T1 with partial register

Partial Σ L1 Σ L2 Σ L3 Σ IMP T2

3528.3208 kWh

Active Imported Energy tariff T2 with partial register

Partial Σ EXP T2

1986.5326 kWh

Active Exported Energy tariff T2 with partial register

Σ IMP T1

3367.124 k varh

Reactive Imported Energy tariff T1

Σ EXP T1

27600.983 k varh

Reactive Exported Energy tariff T1

Σ L1 Σ L2 Σ L3 Σ IMP T2

3245.105.76 k varh

Reactive Imported Energy tariff T2

Σ EXP T2

9250.16 k varh

Reactive Exported Energy tariff T2

Selection Menu

By Pushing \rightarrow from Any page of Main Menu

Σ L

ENERGIES

Three Phase Energies List

L1

ENERGIES

Phase 1 Energies List

L2

ENERGIES

Phase 2 Energies List

L3

ENERGIES

Phase 3 Energies List

Σ L

Instantaneous measures

Three Phase Instantaneous measures active power, reactive power, apparent power, frequency, neutral current

L1

Instantaneous measures

Phase L1, L2 & L3 Instantaneous measures active power L1, active power L2, active power L3, reactive power L1, reactive power L2, reactive power L3, apparent powers, line voltages, system voltage, phase current, power factors, voltage THDs, currents THDs

L2

Instantaneous measures

Parameters List (Read and/or Modify)

Partial

ENERGIES

RESET

Partial Energies Reset Procedure

CHS

626CH

Firmware checksum

S.N.

6574

Serial Number (page required by MID directive)

Year

2023

Year of manufacturing (page required by MID directive)

TYPE

meter

kWh

Instrument type (page required by MID directive)

Ver.

1.04

Firmware version

Partial \rightarrow L1 \rightarrow L2 \rightarrow L3 \rightarrow EXP \rightarrow IMP \rightarrow T1 \rightarrow T2 \rightarrow Hz \rightarrow THD% \rightarrow L2 \rightarrow 3 kWh \rightarrow varh \rightarrow VA \rightarrow 3L3 \rightarrow 4

8888888888

Display test

Password

In Configure Menu it is possible to protect the access to sub-menus of Selection Menu by a password.

OFF

PASSWORD

Once request, to enter the password user must push both UP button and DOWN button at the same time for 4 seconds

Enter

PASSWORD

PLS

250 kWh

PLS

80 tLen

PLS

In - Out

kWh

Parameters in S0 models

Pulses per kWh

In direct connected models, the following values are available: 1, 2, 5, 10, 20, 50, 100 or 200.

The default value is 200

Pulse time length

Duration of ON pulse for S0 outputs: 30 to 100 ms.

The default is 100 ms

S0 ouputs configuration mode

In - Out

S01 proportional to Imported Active Power

S02 proportional to Exported Active Power

Act-React

S01 proportional to Imported Active Power

S02 proportional to Imported Reactive Power

TAR1-TAR2

S01 proportional to Imported Active Power under T1

S02 proportional to Imported Active Power under T2

Password Enabled/Disabled

OFF

PASSWORD

Technical data

Data in compliance with EN 62052-11:2021+A11:2022, EN 62052-31:2016-06, EN 50470-3:2022, EN 62059-32-1:2012			
General characteristics			
Housing	DIN 43880	DIN	4
Mounting	EN 60715	DIN rail	35 mm
Depth		mm	60
Weight		g	424
Operating features			
Connection	to three-phase network - number of wires	-	4
Storage of energy values and configuration	Internal flash non volatile memory	-	<input checked="" type="checkbox"/>
Tariff	for active and reactive energy	-	T1 ... T2 230V
Approval (EN 50470-3:2022)			
Reference Voltage (Un)	phase / neutral	VAC	230
	phase / phase	VAC	400
Nominal Current (In)		A	5
Transition Current (Itr)		A	0.5
Minimum Current (Imin)		A	0.25
Maximum Current (Imax)		A	80
Starting Current (Ist)		A	0.015
Reference Frequency (fn)		Hz	50
Number of phases / number of wires		-	3 / 4
Certified Measures		kWh kWh	kWh
Accuracy			
- Active Energies (accord. to EN 50470-3:2022)		classe	B / 1
- Active Powers (accord. to IEC 62053-21:2020 and IEC 61557-12:2018)		classe	2
- Reactive Energies (accord. to IEC 62053-23:2020)			
- Reactive Power (accord. to IEC 62053-21:2020)			
Supply Voltage and Power Consumption			
Operating Supply Voltage range		V	92 ... 276 / 160 ... 480
Maximum Power Consumption (Voltage circuit)		VA / W	≤ 2 / 0.6
Maximum VA burden (Current circuit) @ Imax		VA	≤ 2
Voltage Input Waveform		-	AC
Voltage impedance		M Ω	1
Current impedance		m Ω	≤ 20
Overload capability			
Voltage	continuous	phase / neutral	VAC 276
	temporary (1 s)	phase / neutral	VAC 300
	continuous	phase / phase	VAC 480
	temporary (1 s)	phase / phase	VAC 800
Current	Maximum	A	96
	temporary (10 ms)	A	2400
Measuring Features			
Voltage range	phase / neutral	VAC	92 ... 276
	phase / phase	VAC	160 ... 480
Current range		A	0.25 ... 80
Frequency range		Hz	45 ... 65
Measured Quantities		-	V, A, kWh, kvarh, PF, Hz, kW, kvar
3 phases Energy calculation		-	WELMEC
Display features			
Display type	LCD with backlight	-	7.2 +3.2
Active Energy	7 digits + 2 decimal digits	kWh	0.01 ... 99999999.9
Reactive Energy	7 digits + 2 decimal digits	kvarh	0.01 ... 99999999.9
Voltage	3 digits + 1 decimal digit	V	92.0 ... 276.0
Current	2 digits + 2 decimal digits / 3+1 / 4+0	A	0.00 ... 80.00
Power factor	1 digit + 3 decimal digits with sign + capac./induc. indic.	-	-1.000 ... 1.000
Frequency	2 digits + 2 decimal digits	Hz	45.00 ... 65.00
Active Power	2 digits + 2 decimal digits	kW	0.00 ... 22.08
Reactive Power	2 digits + 2 decimal digits	kvar	0.00 ... 22.08
Apparent Power	2 digits + 2 decimal digits	kVA	0.00 ... 22.08
Display refresh period		s	1
Optical metrological LED			
Front mounted red LED (meter constant)	proportional to active imp/exp Energy	imp/kWh	1000
Safety			
Utilization category		-	UC2
Overvoltage category		-	3
Protective class		classe	II
AC voltage test		kV	4
Degree of pollution		-	2
Operational voltage		V	300
Impulse voltage test (Uimp)			1.2/50 μ s-kV 6.4
Housing material flame resistance	UL 94	classe	V0
Safety-sealing between upper and lower housing part	-	<input checked="" type="checkbox"/>	
Printed circuit board flammability class		-	V1
Material Group		-	IIla
IR Connectable Communication Modules			
For communication modules		-	<input checked="" type="checkbox"/>
Pulse Outputs (S0 signals)			
Pulse Output 1	acc. to IEC 62053-3 adjustable	-	kWh (T1) \rightarrow , kWh \rightarrow , kWh \rightarrow
Pulse Output 2	adjustable	-	kWh (T2) \rightarrow , kWh \leftarrow , kvarh \rightarrow
Pulse Rate	adjustable	p/kWh	1 ... N (*)
			(*) N - dep. on Pulse on Time
Pulse ON-time	adjustable	ms	30 ... 100
Pulse ON maximum current		mA	90
Pulse OFF leakage current		μ A	1
Isolation class		-	SELV circuit
Tariff			
Tariff 1		-	<input checked="" type="checkbox"/>
Tariff 2		VAC	230 \pm 20%
Input impedance		k Ω	224
Environmental conditions			
Storage temperature range		$^{\circ}$ C	-25 ... +70
Operating temperature range		$^{\circ}$ C	-25 ... +55
Mechanical environment		-	M1
Electromagnetic environment		-	E2
Installation	indoor only	-	<input checked="" type="checkbox"/>
Altitude (max.)		m	\leq 2000
Humidity	yearly average, without condensation	-	\leq 75%
	on 30 days per year, without condensation	-	\leq 95%
IP rating	in built-in condition (front part)	-	IP51
	terminal block	-	IP20
Emission class compatibility CISPR 32		classe	B

General Menu

Main Menu

Three Phase Energies List

Main Page

Partial Σ L1 Σ L2 Σ L3 IMP T1

793200.156 kWh

Partial Σ EXP T1

647.61065 kWh

Partial Σ L1 Σ L2 Σ L3 IMP T2

3528.3208.146 kWh

Partial Σ EXP T2

1986.532608.74 kWh

Σ IMP T1

3367.124 k varh

Σ EXP T1

27600983 k varh

Σ L1 Σ L2 Σ L3 IMP T2

3245.105.76 k varh

Σ EXP T2

9250.16 k varh

Active Imported Energy tariff T1 with partial register

Active Exported Energy tariff T1 with partial register

Active Imported Energy tariff T2 with partial register

Active Exported Energy tariff T2 with partial register

Reactive Imported Energy tariff T1

Reactive Exported Energy tariff T1

Reactive Imported Energy tariff T2

Reactive Exported Energy tariff T2

Selection Menu

By Pushing from Any page of Main Menu

Σ L

ENERGIES

L1

ENERGIES

L2

ENERGIES

L3

ENERGIES

Σ L

Instantaneous measures active power, reactive power, apparent power, frequency, neutral current

L1

Instantaneous measures active power L1, active power L2, active power L3, reactive power L1, reactive power L2, reactive power L3, apparent powers, line voltages, system voltage, phase current, power factors, voltage THDs, currents THDs

CONFIGURE

Parameters List (Read and/or Modify)

Partial ENRG RESET

Partial Energies Reset Procedure

CHS 626CH

Firmware checksum

SN 6574

Serial Number (page required by MID directive)

YEAR 2023

Year of manufacturing (page required by MID directive)

TYPE meter kWh

Instrument type (page required by MID directive)

VER. 1.04

Firmware version

\pm 1.2% Σ L1 Σ L2 Σ L3 Σ EXP T1 Σ EXP T2 PF THD% \pm 0.3%

Display test

Password

In Configure Menu it is possible to protect the access to sub-menus of Selection Menu by a password.

OFF PASSWORD

Once request, to enter the password user must push both UP button and DOWN button at the same time for 4 seconds

Enter PASSWORD

Parameters in models with Modbus on-board

Addr 138

Modbus Address Selectable in the range 1 ... 247. The default address is 1.

Baud RATE 9600

Modbus Baud rate Available Baud Rates are: 1200, 2400, 4800, 9600, 19200, 38400 and 57600 The default baud rate is 19200.

MODE PARITY

Modbus Parity. Available Parity are None, Even and Odd The default Parity is None.

STOP Bits

Modbus Number of Stops Bits (1 or 2). The default number of Stop Bits is 1

OFF PASSWORD

Password Enabled/Disabled

Technical data

Data in compliance with EN 62052-11:2021+A11:2022, EN 62052-31:2016-06, EN 50470-3:2022, EN 62059-32-1:2012			
General characteristics			
Housing	DIN 43880	DIN	4
Mounting	EN 60715	DIN rail	35 mm
Depth		mm	60
Weight		g	424
Operating features			
Connection	to three-phase network - number of wires	-	4
Storage of energy values and configuration	Internal flash non volatile memory	-	<input checked="" type="checkbox"/>
Tariff	for active and reactive energy	-	T1 ... T2 230V
Approval (EN 50470-3:2022)			
Reference Voltage (Un)	phase / neutral	VAC	230
	phase / phase	VAC	400
Nominal Current (In)		A	5
Transition Current (Itr)		A	0.5
Minimum Current (Imin)		A	0.25
Maximum Current (Imax)		A	80
Starting Current (Ist)		A	0.015
Reference Frequency (fn)		Hz	50
Number of phases / number of wires		-	3 / 4
Certified Measures		kWh kWh	kWh
Accuracy			
- Active Energies (accord. to EN 50470-3:2022)		classe	B / 1
- Active Powers (accord. to IEC 62053-21:2020 and IEC 61557-12:2018)			
- Reactive Energies (accord. to IEC 62053-23:2020)		classe	2
- Reactive Power (accord. to IEC 62053-21:2020)			
Supply Voltage and Power Consumption			
Operating Supply Voltage range		V	92 ... 276 / 160 ... 480
Maximum Power Consumption (Voltage circuit)		VA / W	≤2 / 0.6
Maximum VA burden (Current circuit) @ Imax		VA	≤2
Voltage Input Waveform		-	AC
Voltage impedance		MΩ	1
Current impedance		mΩ	≤20
Overload capability			
Voltage	continuous	phase / neutral	VAC 276
	temporary (1 s)	phase / neutral	VAC 300
	continuous	phase / phase	VAC 480
	temporary (1 s)	phase / phase	VAC 800
	Maximum	A	96
	temporary (10 ms)	A	2400
Current			
Measuring Features			
Voltage range	phase / neutral	VAC	92 ... 276
	phase / phase	VAC	160 ... 480
		A	0.25 ... 80
		Hz	45 ... 65
Current range			
Frequency range			
Measured Quantities		-	V, A, kWh, kvarh, PF, Hz, kW, kvar
3 phases Energy calculation		-	WELMEC
Display features			
Display type	LCD with backlight	-	7.2 +3.2
Active Energy	7 digits + 2 decimal digits	kWh	0.01 ... 99999999.9
Reactive Energy	7 digits + 2 decimal digits	kvarh	0.01 ... 99999999.9
Voltage	3 digits + 1 decimal digit	V	92.0 ... 276.0
Current	2 digits + 2 decimal digits / 3+1 / 4+0	A	0.00 ... 80.00
Power factor	1 digit + 3 decimal digits with sign + capac./induc. indic.	-	-1.000 ... 1.000
Frequency	2 digits + 2 decimal digits	Hz	45.00 ... 65.00
Active Power	2 digits + 2 decimal digits	kW	0.00 ... 22.08
Reactive Power	2 digits + 2 decimal digits	kvar	0.00 ... 22.08
Apparent Power	2 digits + 2 decimal digits	kVA	0.00 ... 22.08
Display refresh period		s	1
Optical metrological LED			
Front mounted red LED (meter constant)	proportional to active imp/exp Energy	imp/kWh	1000
Safety			
Utilization category		-	UC2
Overvoltage category		-	3
Protective class		classe	II
AC voltage test		kV	4
Degree of pollution		-	2
Operational voltage		V	300
Impulse voltage test (Uimp)		1.2/50 μs-kV	6.4
Housing material flame resistance	UL 94	classe	V0
Safety-sealing between upper and lower housing part		<input checked="" type="checkbox"/>	
Printed circuit board flammability class		-	V1
Material Group		-	IIla
IR Connectable Communication Modules			
For communication modules		-	<input checked="" type="checkbox"/>
Embedded Modbus communication			
Physical interface	RS-485 - 3 wires	-	-, +, 0
Internal termination resistor		-	120 Ω
Baud rate	adjustable	bps	1200 ... 57600
Parity	adjustable: Odd, Even, None	-	<input checked="" type="checkbox"/>
Stop Bit	adjustable	-	1, 2
Address	adjustable	-	1 ... 247
Isolation class	SELV	-	<input checked="" type="checkbox"/>
Tariff			
Tariff 1		-	<input checked="" type="checkbox"/>
Tariff 2		VAC	230 ±20%
Input impedance		kΩ	224
Environmental conditions			
Storage temperature range		°C	-25 ... +70
Operating temperature range		°C	-25 ... +55
Mechanical environment		-	M1
Electromagnetic environment		-	E2
Installation	indoor only	-	<input checked="" type="checkbox"/>
Altitude (max.)		m	≤2000
Humidity	yearly average, without condensation	-	≤75%
	on 30 days per year, without condensation	-	≤95%
	in built-in condition (front part)	-	IP51
	terminal block	-	IP20
IP rating			
Emission class compatibility CISPR 32		classe	B



(GB)

Code	Model
ECSEM452MID	M3PRO 80 M-Bus MID

Three phase energy meter, direct connection 80 A with MID declaration of conformity and M-Bus communication.

MID certification concerns active energy only.

User instructions.

Safety instructions

- Read this manual carefully BEFORE installing the instrument.
- This device must be installed indoor only by a professional electrician fitter according to local applicable installation standards.
- Do not plug in or unplug this product when the power supplying is ON. Its use is only permitted within the limits shown and stated in the installation instructions. The device and the equipment connected can be destroyed by loads exceeding the values stated.
- Any type of intervention on the products, including cases in which they cease to function or present defects, can be dangerous for the operator's safety and relieves the Manufacturer from all civil and criminal liability.

Function


This 4 quadrants meter measures the active and reactive energy used in an electrical installation. This device can manage 2 tariffs by 230 VAC digital input.

Only the total active energy register can be used for billing purposes according to measuring instrument directive (MID).

- Active Energy Class B (according to EN 50470-3:2022)
- Active Power Class 1 (according to IEC 62053-21:2020 and IEC 61557-12:2018)
- Reactive Energy Class 2 (according to IEC 62053-23:2020)
- Reactive Power Class 2 (according to IEC 62053-21:2020).

This device has a backlit LCD and 3 push-button keys to read Energies, V, I, PF, F, P, Q and to configure some parameters. The design and manufacture of this meter comply with Standard EN 50470-3:2022 requirements.

Power factor
Convention according to IEC 62053-23:2020

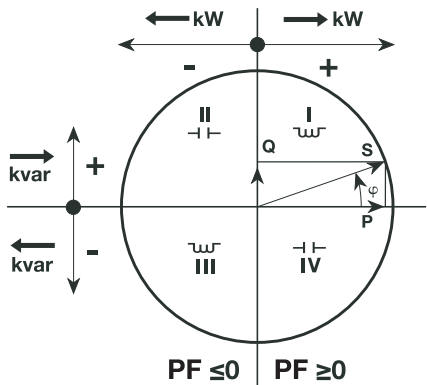

Layout of device

LCD display



Main Energy Register, not resettable

Partial Energy Register, resettable




Commands

- UP button:** to scroll pages and change parameters
- DOWN button:** to scroll pages and change parameters
- MENU/ESC button:** to change menu and stop modification procedure of a parameter
- OK button:** to confirm the modification of a parameter


MID certified

A) Device code and certification data indications


B) Safety-sealing between upper and lower housing part

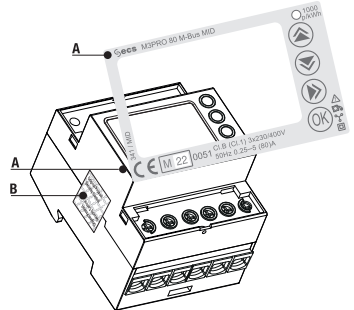

Dimensions

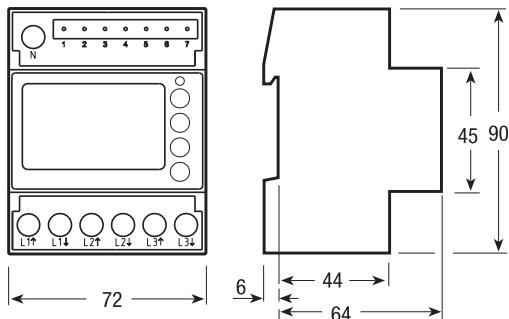


Sealable terminal cover

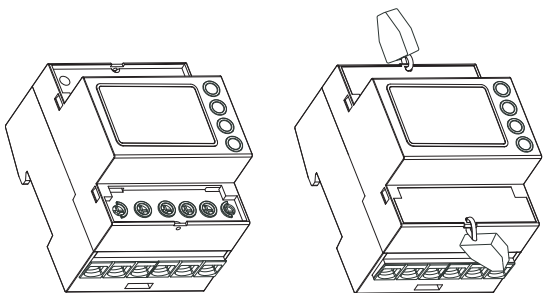

Wiring

Intended use

The Energy Meter is suitable for use on both impedance grounded networks and not grounded networks.

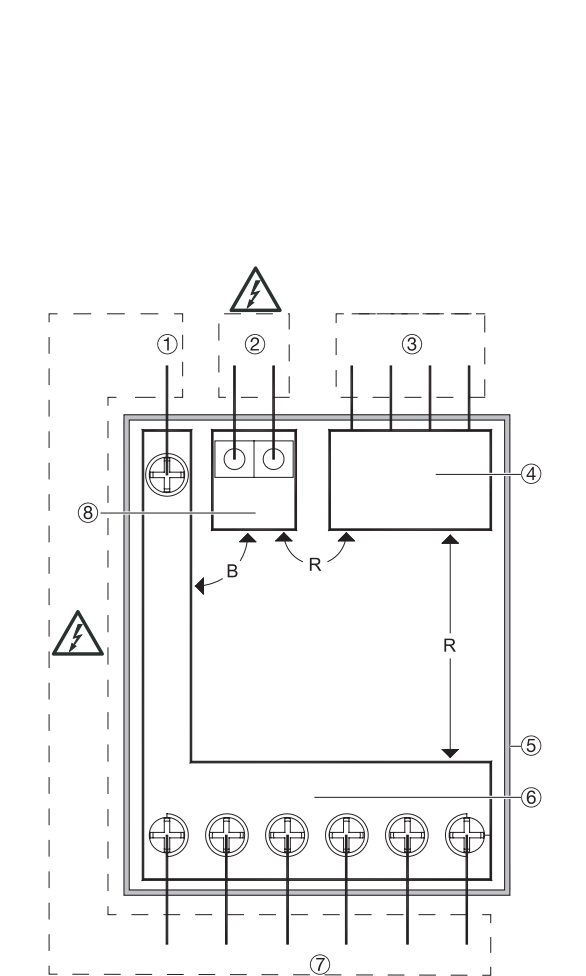


There are no accessible parts

Legend:

- B = Basic insulation
- D = Double insulation
- R = Reinforced insulation
- F = Functional insulation

- ① **HLV TERMINAL**, 1 terminal for neutral
- ② **HLV TERMINAL**, 2 terminal for tariff input
- ③ **SELV TERMINALS**, 4 terminals or 2RJ45 connectors
- ④ **SELV CIRCUIT**, (communication) working voltage <25 Vac, <60Vdc
- ⑤ **PLASTIC CASE (NOT EARTHED)**
- ⑥ **HLV CIRCUIT**, (mains) Working Voltage = 300 Vac
- ⑦ **HLV TERMINAL**, 1 terminal for neutral
- ⑧ **HLV CIRCUIT**, (tariff input) working voltage = 300 Vac

Wiring diagram

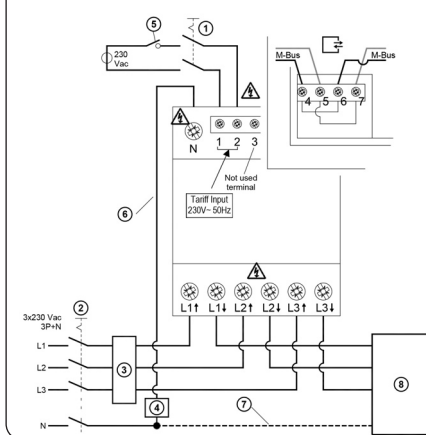

- ① Bipolar disconnector 230Vac
- ② Four-pole disconnector 3X230Vac, 3P+N. The disconnectors must be clearly labelled and must be easily accessible by the installer
- ③ 3 fuses or 3 circuit breakers
- ④ Fuse or circuit breaker in series with the neutral conductor, to be adopted in case the source neutral is not earthed. The installer is responsible for coordinating the rating and the characteristics of the supply side overcurrent protection. The devices must be correctly sized with respect to the installation voltage, the maximum overcurrent applicable to the meter and the fault current available. The following parameters are to be taken into consideration:
 - Maximum current = 80A
 - Maximum Overload current = 96A
 - Maximum Voltage = 276 Vac
- ⑤ Control circuit for the tariff: Open contact: Tariff 1, Close contact: Tariff 2
- ⑥ The connection of the Neutral to the Energy Meter is strictly MANDATORY. Failure to connect affects not only the quality of the measurements, but also electrical safety.
- ⑦ The connection of the Neutral to the load is not mandatory. However, consider that in a 3P + N network, if the Neutral is not connected to the load, the measurements referred to L1, L2 and L3 no longer have any meaning. Only the 3-phase (Σ L) measurements remain significant.
- ⑧ 3 wires or 4 wires electrical load. Connection to the neutral is MANDATORY

Installation and uninstallation

The disconnectors (reference ① and ② in the wiring diagram) must be easy to identify and to operate and must be close to the Meter. They both must be in "OFF" position (open circuits) from the beginning to the end of the installation or of the uninstallation. The Energy Meter, the disconnectors and the overload current protection devices must be easily identifiable, must be installed in an adequate cabinet (IP51 and V1) and it must be easy to intervene on them whenever appropriate. Inside the cabinet, do not install any other device with a flammability class worse than V1.

Commissioning

- Recommendations**
Check the following before putting it into service:
 - Make sure that no dangerous voltages are connected to the SELV terminals.
 - Make sure that a phase has not been connected to the Neutral terminal (this would cause the internal protections to intervene with permanent damage to the Meter).
 - Check that the main page appears on the display (see menu description) and not the Phase Sequence Error page.

Maintenance


- Maintenance**
 - Make sure that no voltage is applied to the instrument.
 - Only dry cleaning is allowed with a natural fiber cloth (for example cotton or linen) or synthetic fabric that does not leave residual fibers that can remain on the surface of the Energy Meter or that can penetrate into the Energy Meter.

- For this Energy meter, no maintenance, repair or replacement of parts is foreseen. Such interventions are to be considered prohibited. In case of malfunction, it must be replaced.

Help in case of problems



Error condition

When partial energy blinks, reset partial energy (maximum partial energy register). When the display shows the message ERROR N02 or ERROR N03, the meter has got a malfunction and must be replaced.

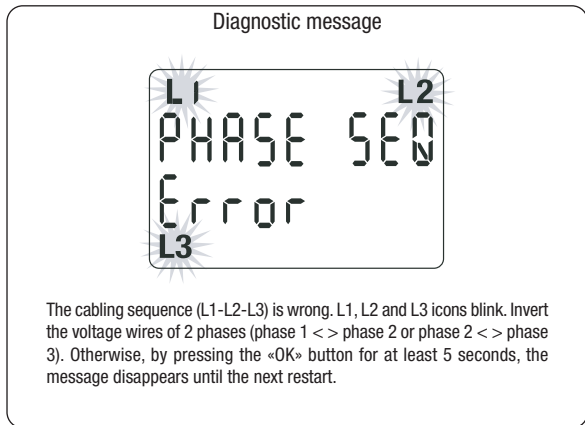

The cabling sequence (L1-L2-L3) is wrong. L1, L2 and L3 icons blink. Invert the voltage wires of 2 phases (phase 1 < > phase 2 or phase 2 < > phase 3). Otherwise, by pressing the «OK» button for at least 5 seconds, the message disappears until the next restart.

Notes

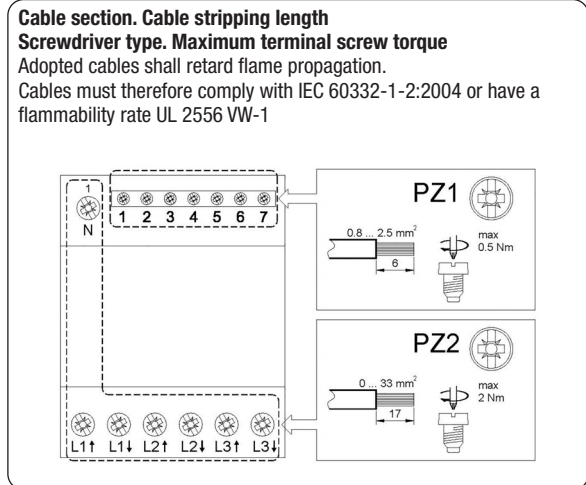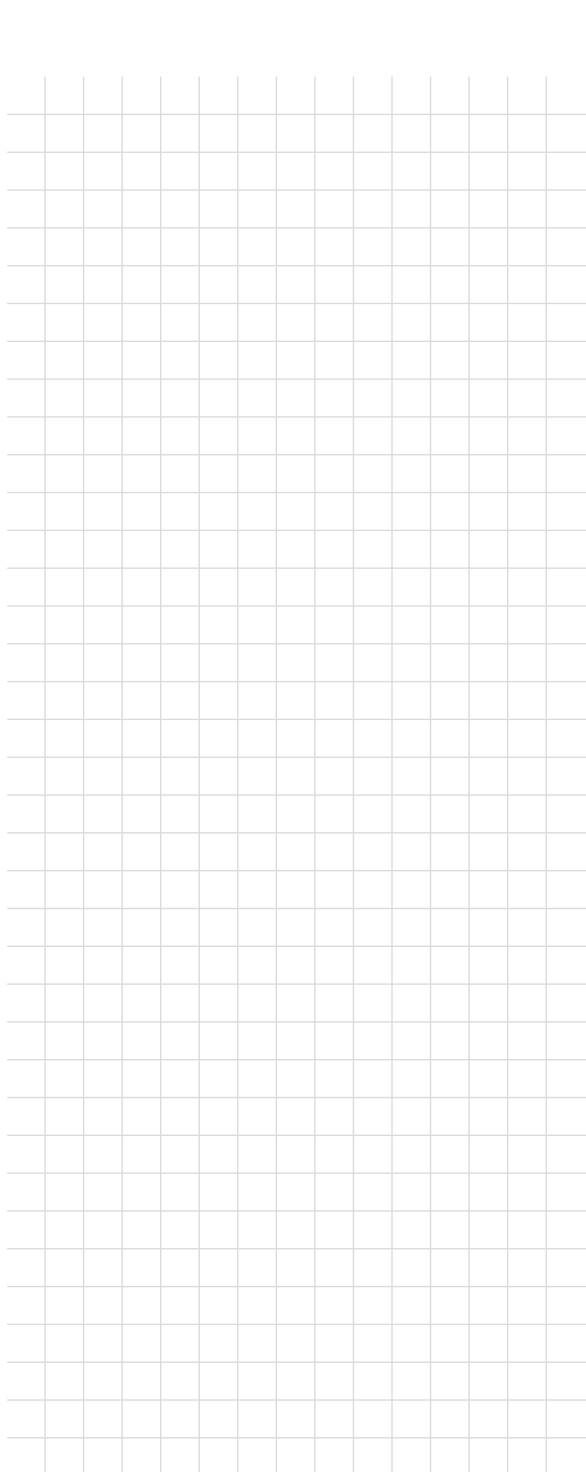

General Menu

Main Menu

Three Phase Energies List

Main Page

Partial Σ L1 Σ L2 Σ L3 IMP T1

2934793200156

kWh

Partial Σ EXP T1

64761065

kWh

Partial Σ L1 Σ L2 Σ L3 IMP T2

35283208146

kWh

Partial Σ EXP T2

198653260814

kWh

Σ IMP T1

3367124

k varh

Σ EXP T1

27600983

k varh

Σ L1 Σ L2 Σ L3 IMP T2

324510576

k varh

Σ EXP T2

925016

k varh

Active Imported Energy tariff T1 with partial register

Active Exported Energy tariff T1 with partial register

Active Imported Energy tariff T2 with partial register

Active Exported Energy tariff T2 with partial register

Reactive Imported Energy tariff T1

Reactive Exported Energy tariff T1

Reactive Imported Energy tariff T2

Reactive Exported Energy tariff T2

Selection Menu

By Pushing from Any page of Main Menu

Σ L

EnErGIES

(*) OK

Three Phase Energies List

L1

EnErGIES

(*) OK

Phase 1 Energies List

L2

EnErGIES

(*) OK

Phase 2 Energies List

L3

EnErGIES

(*) OK

Phase 3 Energies List

Σ L

InStnERStES

(*) OK

Three Phase Instantaneous measures
active power, reactive power, apparent power, frequency, neutral current

L1

InStnERStES

(*) OK

Phase L1, L2 & L3 Instantaneous measures
active power L1, active power L2, active power L3, reactive power L1, reactive power L2, reactive power L3, apparent powers, line voltages, system voltage, phase current, power factors, voltage THDs, currents THDs

Σ L

CONFIGURE

(*) OK

Parameters List (Read and/or Modify)

Partial EnErGIES

RESET

(*) OK

Partial Energies Reset Procedure

CHS

626CH

Firmware checksum

SN

6574

Serial Number (page required by MID directive)

YEAR

2023

Year of manufacturing (page required by MID directive)

TYPE

meter

Instrument type (page required by MID directive)

VER.

1.04

Firmware version

Partial \pm 1.2% Σ L1 Σ L2 Σ L3 EXP T1

88888888

Hz

Display test

Password

In Configure Menu it is possible to protect the access to sub-menus of Selection Menu by a password.

OFF

PASSWORD

Once request, to enter the password user must push both UP button and DOWN button at the same time for 4 seconds

Enter

PASSWORD

Parameters in models with M-Bus on-board

Addr

138

Baud

Rate

9600

Id

04517629

OFF

PASSWORD

M-Bus Primary Address

Selectable in the range 1...250

The default value is 0, but, once modified to a value 1...250, it is no longer possible to go back to 0.

M-Bus Baud Rate

Available Baud Rates are:

300, 600, 1200, 2400, 4800 and 9600

The default baud rate is 2400

Unique M-Bus Secondary Address,

not modifiable

Password Enabled/Disabled

Technical data

Data in compliance with EN 62052-11:2021+A11:2022, EN 62052-31:2016-06, EN 50470-3:2022, EN 62059-32-1:2012			
General characteristics			
Housing	DIN 43880	DIN	4
Mounting	EN 60715	DIN rail	35 mm
Depth		mm	60
Weight		g	424
Operating features			
Connection	to three-phase network - number of wires	-	4
Storage of energy values and configuration	Internal flash non volatile memory	-	<input checked="" type="checkbox"/>
Tariff	for active and reactive energy	-	T1 ... T2 230V
Approval (EN 50470-3:2022)			
Reference Voltage (Un)	phase / neutral	VAC	230
	phase / phase	VAC	400
		A	5
		A	0.5
		A	0.25
		A	80
		A	0.015
		Hz	50
		-	3 / 4
		kWh kWh	kWh
Accuracy			
- Active Energies (accord. to EN 50470-3:2022)		classe	B / 1
- Active Powers (accord. to IEC 62053-21:2020 and IEC 61557-12:2018)			
- Reactive Energies (accord. to IEC 62053-23:2020)		classe	2
- Reactive Power (accord. to IEC 62053-21:2020)			
Supply Voltage and Power Consumption			
Operating Supply Voltage range	V		92 ... 276 / 160 ... 480
Maximum Power Consumption (Voltage circuit)	VA / W		≤2 / 0.6
Maximum VA burden (Current circuit) @ Imax	VA		≤2
Voltage Input Waveform	-		AC
Voltage impedance	MΩ		1
Current impedance	mΩ		≤20
Overload capability			
Voltage	continuous	phase / neutral	VAC 276
	temporary (1 s)	phase / neutral	VAC 300
	continuous	phase / phase	VAC 480
	temporary (1 s)	phase / phase	VAC 800
	Maximum	A	96
	temporary (10 ms)	A	2400
Current			
Measuring Features			
Voltage range	phase / neutral	VAC	92 ... 276
	phase / phase	VAC	160 ... 480
		A	0.25 ... 80
		Hz	45 ... 65
		-	V, A, kWh, kvarh, PF, Hz, kW, kvar
		-	WELMEC
Display features			
Display type	LCD with backlight	-	7.2 +3.2
Active Energy	7 digits + 2 decimal digits	kWh	0.01 ... 99999999.9
Reactive Energy	7 digits + 2 decimal digits	kvarh	0.01 ... 99999999.9
Voltage	3 digits + 1 decimal digit	V	92.0 ... 276.0
Current	2 digits + 2 decimal digits / 3+1 / 4+0	A	0.00 ... 80.00
Power factor	1 digit + 3 decimal digits with sign + capac./induc. indic.	-	-1.000 ... 1.000
Frequency	2 digits + 2 decimal digits	Hz	45.00 ... 65.00
Active Power	2 digits + 2 decimal digits	kW	0.00 ... 22.08
Reactive Power	2 digits + 2 decimal digits	kvar	0.00 ... 22.08
Apparent Power	2 digits + 2 decimal digits	kVA	0.00 ... 22.08
Display refresh period		s	1
Optical metrological LED			
Front mounted red LED (meter constant)	proportional to active imp/exp Energy	imp/kWh	1000
Safety			
Utilization category	-		UC2
Overvoltage category	-		3
Protective class		classe	II
AC voltage test		kV	4
Degree of pollution	-		2
Operational voltage		V	300
Impulse voltage test (Uimp)		1.2/50 μs-kV	6.4
Housing material flame resistance	UL 94	classe	V0
Safety-sealing between upper and lower housing part	-	<input checked="" type="checkbox"/>	
Printed circuit board flammability class	-		V1
Material Group	-		IIla
IR Connectable Communication Modules			
For communication modules		-	<input checked="" type="checkbox"/>
Embedded communication M-Bus			
Baud rate	adjustable	-	300-600-1200-2400-4800-9600
Unit load		-	1
Isolation class		-	SELV circuit
Tariff			
Tariff 1		-	<input checked="" type="checkbox"/>
Tariff 2		VAC	230 ±20%
Input impedance		kΩ	224
Environmental conditions			
Storage temperature range		°C	-25 ... +70
Operating temperature range		°C	-25 ... +55
Mechanical environment		-	M1
Electromagnetic environment		-	E2
Installation	indoor only	-	<input checked="" type="checkbox"/>
Altitude (max.)		m	≤2000
Humidity	yearly average, without condensation	-	≤75%
	on 30 days per year, without condensation	-	≤95%
	in built-in condition (front part)	-	IP51
	terminal block	-	IP20
Emission class compatibility CISPR 32		classe	B



GB

Code	Model
ECSEM533MID	M3PRO 80 IP MID

Three phase energy meter, direct connection 80 A with MID declaration of conformity and Modbus TCP/IP communication.

MID certification concerns active energy only.

User instructions.


Safety instructions

- Read this manual carefully BEFORE installing the instrument.
- This device must be installed indoor only by a professional electrician fitter according to local applicable installation standards.
- Do not plug in or unplug this product when the power supplying is ON. Its use is only permitted within the limits shown and stated in the installation instructions. The device and the equipment connected can be destroyed by loads exceeding the values stated.
- Any type of intervention on the products, including cases in which they cease to function or present defects, can be dangerous for the operator's safety and relieves the Manufacturer from all civil and criminal liability.

Function


This 4 quadrants TCP/IP meter measures the active and reactive energy used in an electrical installation.
Only the total active energy register can be used for billing purposes according to measuring instrument directive (MID).
- Active Energy Class B (according to EN 50470-3:2022)
- Active Power Class 1 (according to IEC 62053-21:2020 and IEC 61557-12:2018)
- Reactive Energy Class 2 (according to IEC 62053-23:2020)
- Reactive Power Class 2 (according to IEC 62053-21:2020).
This device has a backlighted LCD and 4 push-button keys to read Energies, V, I, PF, F, P, Q and to configure some parameters. The design and manufacture of this meter comply with Standard EN 50470-3:2022 requirements.

Power factor
Convention according to IEC 62053-23:2020

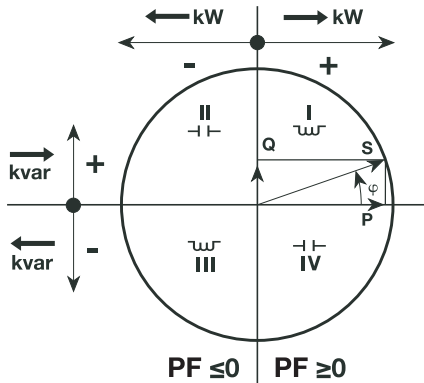

Layout of device

LCD display

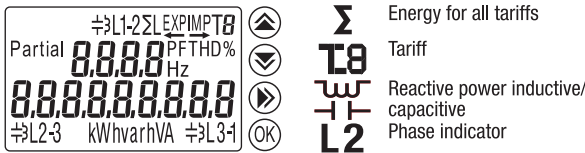

Main Energy Register, not resettable

Partial Energy Register, resettable




Commands


- UP button:** to scroll pages and change parameters
- DOWN button:** to scroll pages and change parameters
- MENU/ESC button:** to change menu and stop modification procedure of a parameter
- OK button:** to confirm the modification of a parameter

MID certified


- A) Device code and certification data indications
- B) Safety-sealing between upper and lower housing part

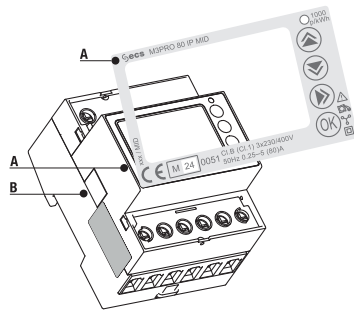

Dimensions

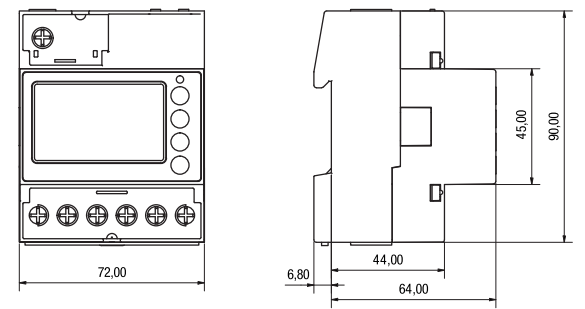


Sealable terminal cover

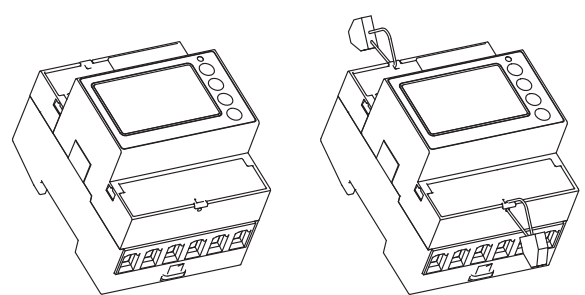

Wiring


Intended use
The Energy Meter is suitable for use on both impedance grounded networks and not grounded networks.

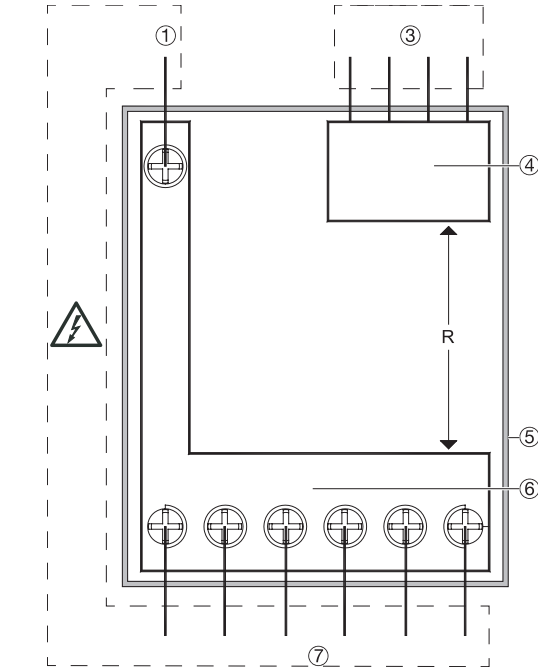

There are no accessible parts

- Legend:
- B = Basic insulation
 - D = Double insulation
 - R = Reinforced insulation
 - F = Functional insulation
- ① **HLV TERMINAL**, 1 terminal for neutral
 - ② **HLV TERMINAL**
 - ③ **SELV TERMINALS**, RJ45 connector
 - ④ **SELV CIRCUIT**, (communication) working voltage <25 Vac, <60Vdc
 - ⑤ **PLASTIC CASE (NOT EARTHED)**
 - ⑥ **HLV CIRCUIT**, (mains) Working Voltage = 300 Vac
 - ⑦ **HLV TERMINAL**, 1 terminal for neutral
 - ⑧ **HLV CIRCUIT**, (tariff input) working voltage = 300 Vac

Wiring diagram

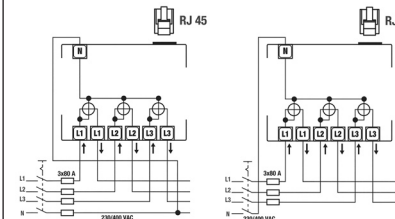

- ① Bipolar disconnector 230Vac
- ② Four-pole disconnector 3X230Vac, 3P+N. The disconnectors must be clearly labelled and must be easily accessible by the installer
- ③ 3 fuses or 3 circuit breakers
- ④ Fuse or circuit breaker in series with the neutral conductor, to be adopted in case the source neutral is not earthed. The installer is responsible for coordinating the rating and the characteristics of the supply side overcurrent protection. The devices must be correctly sized with respect to the installation voltage, the maximum overcurrent applicable to the meter and the fault current available. The following parameters are to be taken into consideration:
 - Maximum current = 80A
 - Maximum Overload current = 96A
 - Maximum Voltage = 276 Vac
- ⑤ The connection of the Neutral to the Energy Meter is strictly MANDATORY. Failure to connect affects not only the quality of the measurements, but also electrical safety.
- ⑥ The connection of the Neutral to the load is not mandatory. However, consider that in a 3P + N network, if the Neutral is not connected to the load, the measurements referred to L1, L2 and L3 no longer have any meaning. Only the 3-phase (ΣL) measurements remain significant.
- ⑦ 3 wires or 4 wires electrical load. Connection to the neutral is MANDATORY

Installation and uninstallation

The disconnectors (reference ① and ② in the wiring diagram) must be easy to identify and to operate and must be close to the Meter. They both must be in "OFF" position (open circuits) from the beginning to the end of the installation or of the uninstallation. The Energy Meter, the disconnectors and the overload current protection devices must be easily identifiable, must be installed in an adequate cabinet (IP51 and V1) and it must be easy to intervene on them whenever appropriate. Inside the cabinet, do not install any other device with a flammability class worse than V1.

Commissioning

- Recommendations
- Check the following before putting it into service:
- Make sure that no dangerous voltages are connected to the SELV terminals.
 - Make sure that a phase has not been connected to the Neutral terminal (this would cause the internal protections to intervene with permanent damage to the Meter).
 - Check that the main page appears on the display (see menu description) and not the Phase Sequence Error page.

Maintenance

- Make sure that no voltage is applied to the instrument.
- Only dry cleaning is allowed with a natural fiber cloth (for example cotton or linen) or synthetic fabric that does not leave residual fibers that can remain on the surface of the Energy Meter or that can penetrate into the Energy Meter.
- For this Energy meter, no maintenance, repair or replacement of parts is foreseen. Such interventions are to be considered prohibited. In case of malfunction, it must be replaced.

Help in case of problems

Error condition
When partial energy blinks, reset partial energy (maximum partial energy register). When the display shows the message ERROR N02 or ERROR N03, the meter has got a malfunction and must be replaced.

Diagnostic message


The cabling sequence (L1-L2-L3) is wrong. L1, L2 and L3 icons blink. Invert the voltage wires of 2 phases (phase 1 < > phase 2 or phase 2 < > phase 3). Otherwise, by pressing the «OK» button for at least 5 seconds, the message disappears until the next restart.

Notes

Cable section. Cable stripping length
Screwdriver type. Maximum terminal screw torque
Adopted cables shall retard flame propagation.
Cables must therefore comply with IEC 60332-1-2:2004 or have a flammability rate UL 2556 VW-1


General Menu

Main Menu

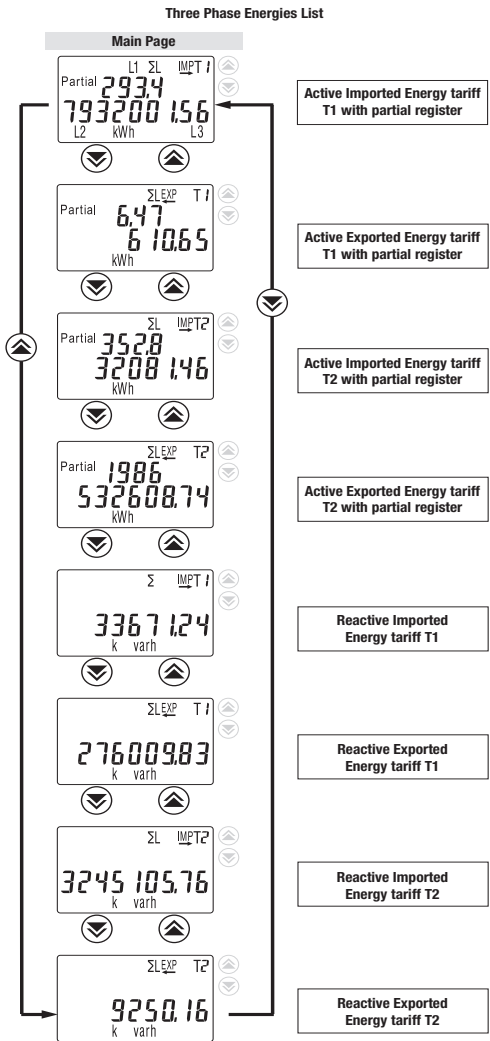


Selection Menu

By Pushing  from Any page of Main Menu

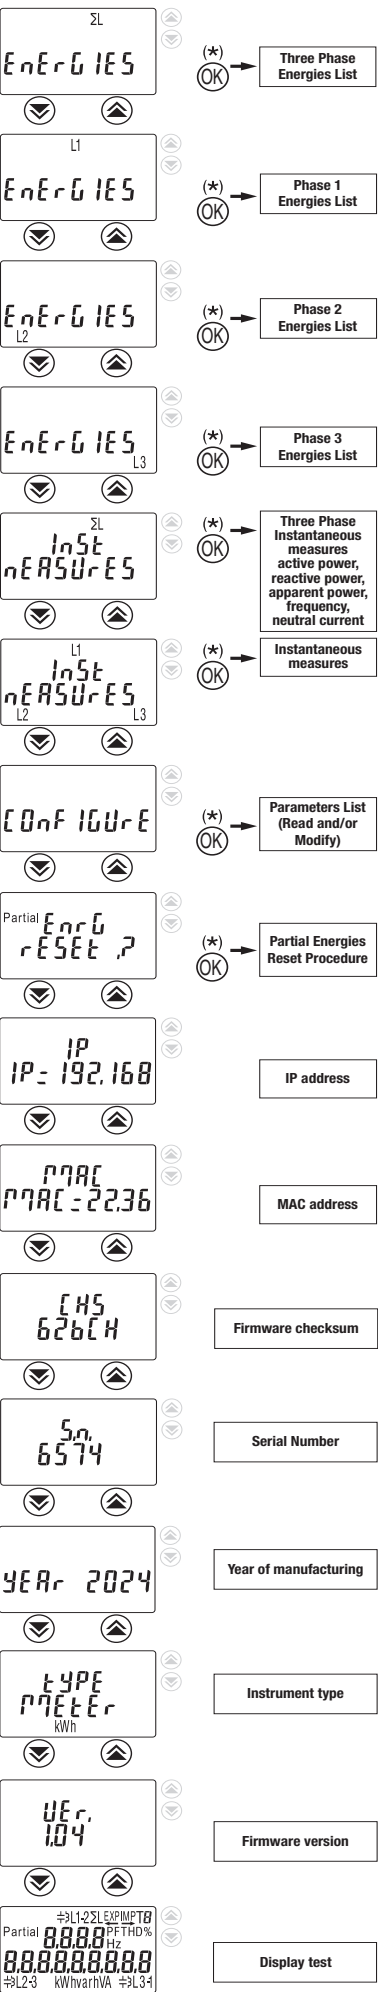

Configure Menu

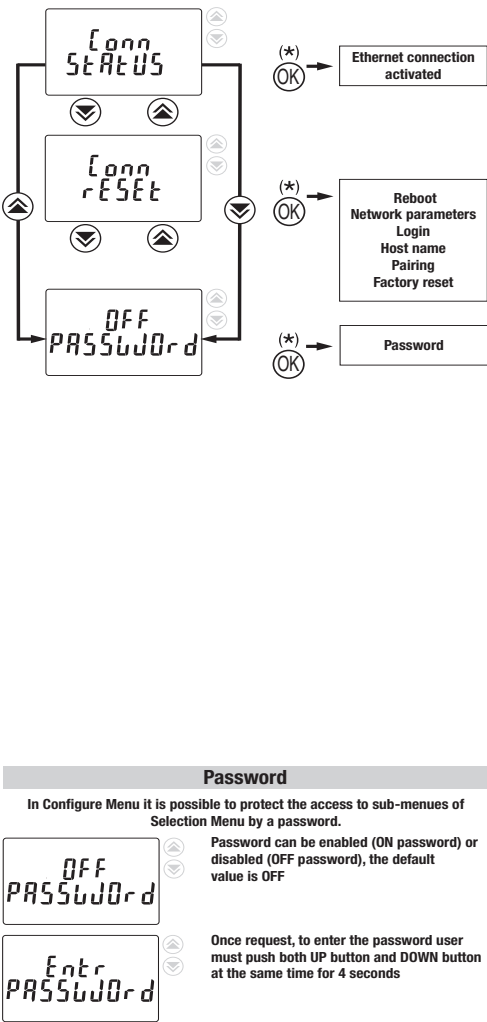

Technical data

Data in compliance with EN 62052-11:2021+A11:2022, EN 62052-31:2016-06, EN 50470-3:2022, EN 62059-32-1:2012

General characteristics			
Housing	DIN 43880	DIN	4
Mounting	EN 60715	DIN rail	35 mm
Depth		mm	60
Weight		g	424
Operating features			
Connection	to three-phase network - number of wires	-	4
Storage of energy values and configuration	Internal flash non volatile memory	-	<input checked="" type="checkbox"/>
Tariff		-	T1 ... T2
Approval (EN 50470-3:2022)			
Reference Voltage (Un)	phase / neutral	VAC	230
	phase / phase	VAC	400
Nominal Current (In)		A	5
Transition Current (Itr)		A	0.5
Minimum Current (Imin)		A	0.25
Maximum Current (Imax)		A	80
Starting Current (Ist)		A	0.015
Reference Frequency (fn)		Hz	50
Number of phases / number of wires		-	3 / 4
Certified Measures		kWh kWh	kWh
Accuracy			
- Active Energies (accord. to EN 50470-3:2022)		classe	B / 1
- Active Powers (accord. to IEC 62053-21:2020 and IEC 61557-12:2018)			
- Reactive Energies (accord. to IEC 62053-23:2020)		classe	2
- Reactive Power (accord. to IEC 62053-21:2020)			
Supply Voltage and Power Consumption			
Operating Supply Voltage range		V	92 ... 276 / 160 ... 480
Maximum Power Consumption (Voltage circuit)		VA / W	≤4 / 2
Maximum VA burden (Current circuit) @ Imax		VA	≤2
Voltage Input Waveform		-	AC
Voltage impedance		MΩ	1
Current impedance		mΩ	≤20
Overload capability			
Voltage	continuous	phase / neutral	VAC 276
	temporary (1 s)	phase / neutral	VAC 300
	continuous	phase / phase	VAC 480
	temporary (1 s)	phase / phase	VAC 800
Current	Maximum	A	96
	temporary (10 ms)	A	2400
Measuring Features			
Voltage range	phase / neutral	VAC	184 ... 276
	phase / phase	VAC	320 ... 480
		A	0.25 ... 80
		Hz	45 ... 65
		-	V, A, kWh, kvarh, PF, Hz, kW, kvar
		-	scalar sum - WELMEC
Current range			
Frequency range			
Measured Quantities			
3 phases Energy calculation			
Display features			
Display type	LCD with backlight	-	7.2 +3.2
Active Energy	7 digits + 2 decimal digits	kWh	0.01 ... 99999999.9
Reactive Energy	7 digits + 2 decimal digits	kvarh	0.01 ... 99999999.9
Voltage	3 digits + 1 decimal digit	V	92.0 ... 276.0
Current	2 digits + 2 decimal digits / 3+1 / 4+0	A	0.00 ... 80.00
Power factor	1 digit + 3 decimal digits with sign + capac./induc. indic.	-	-1.000 ... 1.000
Frequency	2 digits + 2 decimal digits	Hz	45.00 ... 65.00
Active Power	2 digits + 2 decimal digits	kW	0.00 ... 22.08
Reactive Power	2 digits + 2 decimal digits	kvar	0.00 ... 22.08
Apparent Power	2 digits + 2 decimal digits	kVA	0.00 ... 22.08
Display refresh period		s	1
Optical metrological LED			
Front mounted red LED (meter constant)	proportional to active imp/exp Energy	imp/kWh	1000
Safety			
Utilization category		-	UC2
Overvoltage category		-	3
Protective class		classe	II
AC voltage test		kV	4
Degree of pollution		-	2
Operational voltage		V	300
Impulse voltage test (Uimp)		1.2/50 μs-kV	6.4
Housing material flame resistance	UL 94	classe	V0
Safety-sealing between upper and lower housing part		-	<input checked="" type="checkbox"/>
Printed circuit board flammability class		-	V1
Material Group		-	IIIa
IR Connectable Communication Modules			
For communication modules		-	<input checked="" type="checkbox"/>
Default setting			
DHCP (fallback values in case of connection failure with the server after 2 minutes)			ON
IP address (fallback)			192.168.1.253 (192.168.0.101)
Subnet Mask (fallback)			255.255.255.0 (255.255.255.0)
Gateway (fallback)			192.168.1.1 (192.168.0.1)
Primary DNS (fallback)			8.8.8.8 (192.168.0.1)
Secondary DNS (fallback)			156.154.70.1 (1.1.1.1)
Administrator Rights		Username	admin
* Password is forced to be change at first connection. In case it is forget, it can be reset to admin on the meter HMI		Password	admin*
Environmental conditions			
Storage temperature range		°C	-40 ... +85
Operating temperature range		°C	-25 ... +70
Mechanical environment		-	M1
Electromagnetic environment		-	E2
Installation	indoor only	-	<input checked="" type="checkbox"/>
Altitude (max.)		m	≤2000
Humidity	yearly average, without condensation	-	≤75%
	on 30 days per year, without condensation	-	≤95%
	in built-in condition (front part)	-	IP51
	terminal block	-	IP20
IP rating			
Emission class compatibility CISPR 32		classe	B